

# Wedgetail Rails and Platform Fitting Instruction

To suit Mitsubishi Pajero NS-NT LWB 2006-On



WT-MPNX-2212

**Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.














Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

## **Tools Required:**

- Hex key (6 mm)
- Spanner (10,13 & 17mm)
- Trim Remover

## **Kit Content**

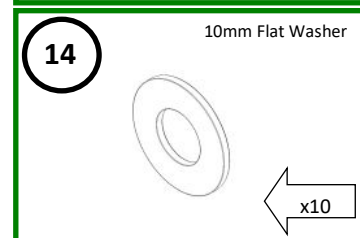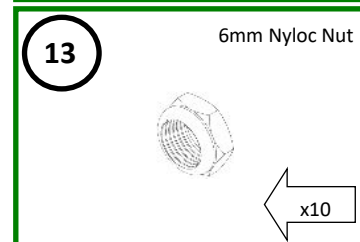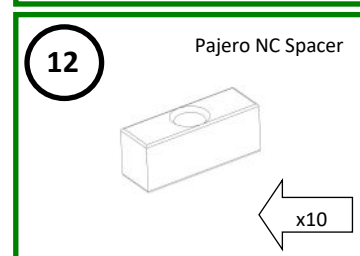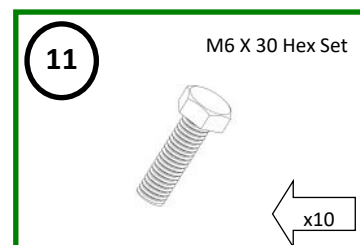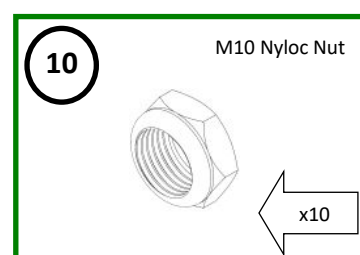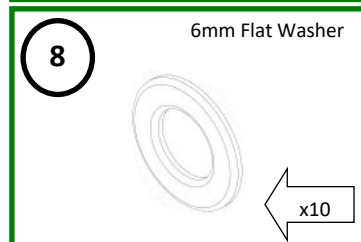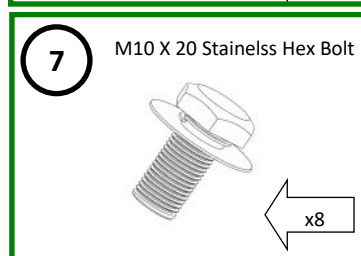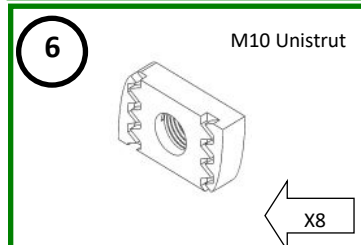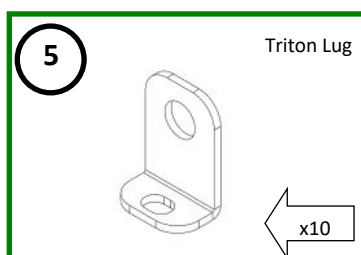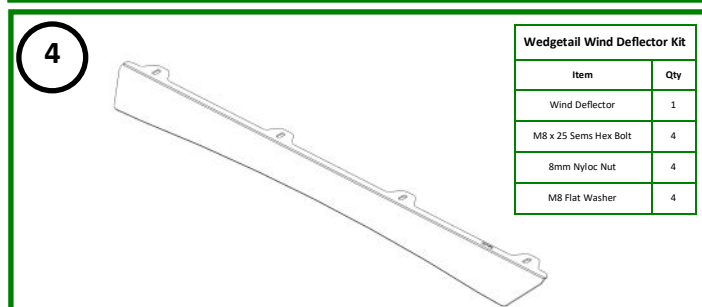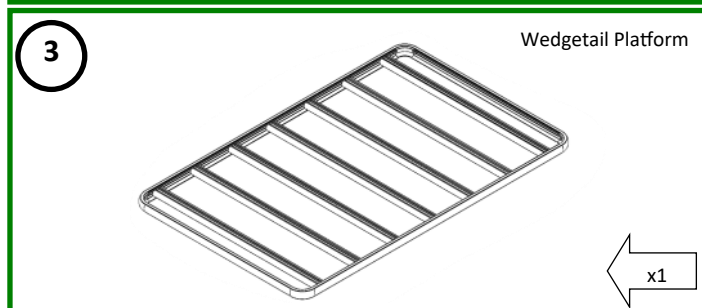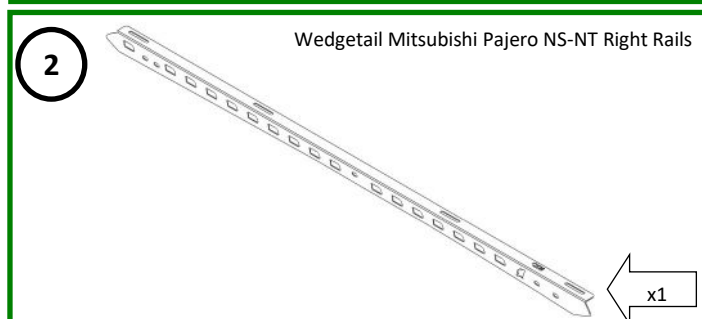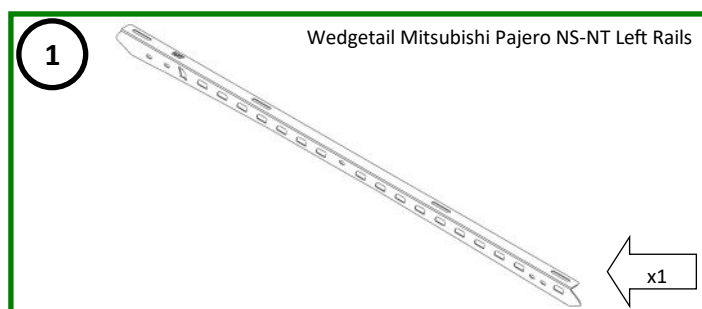

### Removing Factory rails

1

- Headlining needs to be lowered to access factory rail fastenings.

2

- Once factory rails and all fastenings have been removed Place the spacer blocks supplied at each mounting point as shown Once factory rails and all fastenings have been removed Place the spacer blocks supplied at each mounting




3

- Now fasten Wedgetail mounting lug (Use M6 Bolts & Washers & Nyloc Nut provided) - 4 Front - 2 Middle - 4 Rear Please use sealant under lugs and around the fasteners (Neutral Cure non-corrosive silicone/ sealant)



4

- Attach rails to lugs using 10mm hardware with the wedgetail logo facing to the front of the vehicle. Refer to the diagram (Do not tighten fully).

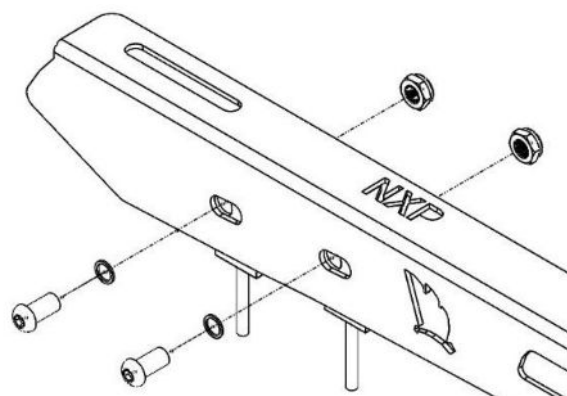

# Wedgetail Rails and Platform Fitting Instruction

To suit Mitsubishi Pajero NS-NT LWB 2006-On




WT-MPNX-2212

5

- Attach the channel nuts to the top of rail.
  - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

\* Channel nuts to the top as shown in the following diagram

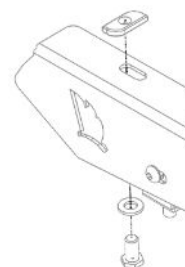

## Assemble the Wedgetail Platform to the rails

6

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

7

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

8

- Fully tighten remaining bolts in the following order:

1. Rails to the lugs
2. Rails to platform
3. Attach wind Deflector.

**NOTE**-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



**Fitting Note:**

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration